1800 COLLECTION PREFERRED ADA SEATS

FUNCTIONAL STYLE

sales@preferredbathinc.com www.preferredbathinc.com (336) 904-6248

ADA LEFT HAND SHOWER SEAT WITH SUPPORT LEGS

PART NUMBERS

FINISH


WARM TO THE TOUCH NYLON TOP


1800-LS-FDLH-W


WHITE

- ANTIMICROBIAL PER ISO22196:2011
- DURABLE ANTI-CORROSIVE 304 STAINLESS STEEL FRAME CONSTRUCTION
- MEETS AND EXCEEDS ADA 2010 ADAAG REQUIREMENTS AND 2017 ANSI STANDARDS
- LOAD BEARING CAPACITY OF 450 LBS
- ADJUSTABLE AND FLEXIBLE FEET FOR A SECURE AND STABLE SEAT
- HARDWARE INCLUDED
- PRE-ASSEMBLED LEFT-HAND SHOWER SEAT 1
- NYLON DECORATIVE FLANGES 3
- **MOUNTING TEMPLATE 1**
- STAINLESS STEEL MOUNTING SCREWS 12
- MULTIPLE COLORS AVAILABLE



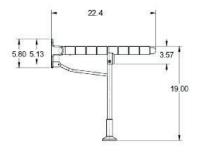

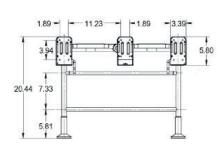

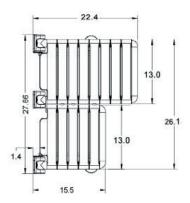

CARE AND CLEANING:

When cleaning wipe the fixture down with a damp soft cloth to prevent any mineral build-up. Do not use any abrasive cleaning products, aggressive chemical cleaning products, abrasive cleaning pads, or harsh/abrasive polishes on this fixture. This will damage the finish and the smooth comfortable seating surface of the product. The use of such products will void the warranty.

Do not allow any personal hygiene products such as soap, shampoo, conditioner to stay on the fixture for any extended period of time. If this should occur please rinse off with water or wipe off with a damp cloth. The potential build up that occurs from these products can cause premature wear and may also diminish the beauty and durability of its finish.



INSTALLATION:

Use provided mounting template to mark the proper hole placement. Use provided stainless steel mounting screws and mount to wall. Once mounted install nylon decorative cover flanges and adjust the feet.

WOOD BLOCKING IS REQUIRED FOR COMMERCIAL APPLICATION AND SHOULD GENEROUSLY EXTEND PAST THE **HEIGHT AND WIDTH OF THE PRODUCT**